

Faulkner® RV Screen Door Push Bar Installation

Figure 1 — RV Screen Door Push Bar Components

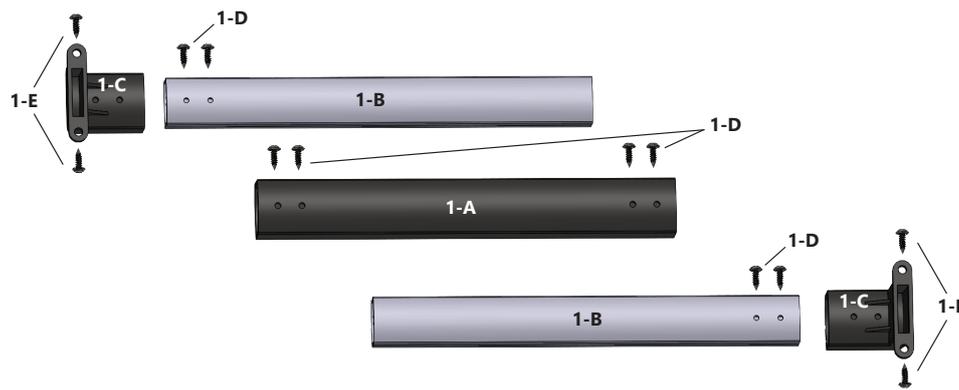


Figure	Component	Qty	Size (inches)	Size (mm)
1-A	Center Bar (black plastic)*	1	10-3/16" L	26.0mm L
1-B	Connecting Bars (aluminum)	2	10-7/16" L	26.5mm L
1-C	Support Ends (black plastic)*	2	2" L x 2-3/8" H x 2" D	51mm L x 60mm H x 51mm D
1-D	Assembly Screws	8	#8 x 1/2"	—
1-E	Mounting Screws	4	#10 x 5/8"	—

In the box

- See Figure 1 table

Before installing

- Secure your RV with wheel chocks
- Wear safety gloves and goggles


Tools required

- Drill and 1/8" drill bit
- Masking tape (7" strips x 2)
- Pencil or erasable marker
- #2 Phillips screwdriver

* Alternate color option is white plastic

STEP 1 — Assemble the components

- A. Insert each aluminum Connecting Bar into each Support End and align the pre-drilled holes (Fig. 2-A), then secure both pieces together with two screws (Fig. 2-B).

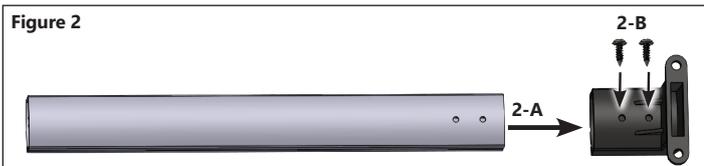

- B. With both assembled Connecting Bars, slide each one into each end of the black Center Bar. (Fig. 3)



- C. Prepare the two 7" strips of masking tape.

STEP 2 — Position, tape, and drill holes into the assembly

- A. Place the assembly up against your screen door and adjust the three pieces until the bar is positioned where you want it and as follows:
- Ensure the black plastic Connecting Bar is centered horizontally between both the left and right aluminum bar assemblies.
 - Ensure the left and right Support Ends are the same vertical distances above your screen door crossbar (or other reference point, such as the hatch for the door handle).
- B. Using a pencil or erasable marker, place a mark through the top pre-drilled hole of each left and right Support End on your screen door.
- C. To temporarily secure the assembly together, wrap a piece of masking tape around each end of the black plastic Center Bar where it meets the left and right aluminum Connecting Bars (Fig. 4). Make sure the tape does not cover up any of the pre-drilled holes.



- D. With the pre-drilled holes facing you, use a drill with 1/8" drill bit to drill holes into the aluminum Connecting Bars. Use the the four pre-drilled holes in the black plastic Center Bar as a guide. **Caution:** Make sure you don't drill through the other side of the aluminum bar (the side that faces outward when installed).

STEP 3 — Install the assembly onto the screen door

- A. Secure the black plastic Center Bar to the aluminum Connecting Bars with the four supplied screws (Fig. 5). Remove the pieces of tape.



- B. On your screen door, at the two locations you marked, drill out a shallow hole with the 1/8" drill bit. **Caution:** Make sure you don't drill too deeply or through the other side of the door.
- C. Flip the push bar over and place it up against your screen door, aligning the top holes of each End Support over the drilled holes in the door. Install a screw through the top holes of the End Supports to partially secure the push bar onto your screen door.
- D. Now that top holes are secured, drill out the final two shallow holes in your screen door using the bottom hole of each End Support as a guide. **Caution:** Make sure you don't drill too deeply or through the other side of the door.
- E. Install a screw through the bottom holes of the End Supports to secure the push bar completely onto your screen door.

The installation is complete.

Figure 1 — Pièces de la barre-poussoir de porte-moustiquaire de VR

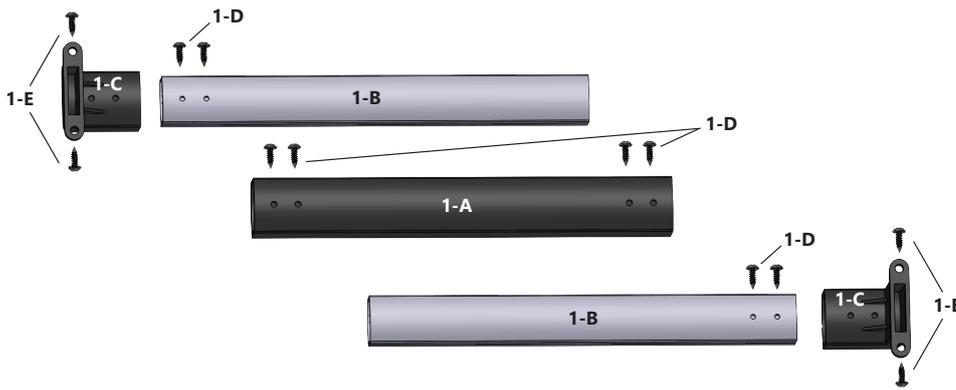


Figure	Pièce	Qté	Taille (po)	Taille (mm)
1-A	Barre centrale (plastique noir)	1	10-3/16 po L	26,0mm L
1-B	Barres de raccordement (aluminium)	2	10-7/16 po L	26,5mm L
1-C	Supports d'extrémité (plastique noir)	2	2 po L x 2-3/8 po H x 2 po P	51 mm L x 60 mm H x 51 mm P
1-D	Vis d'assemblage	8	No 8 x 1/2 po	—
1-E	Vis de montage	4	No 10 x 5/8po	—

Contenu de la boîte

- Voir la figure 1

Avant l'installation

- Immobiliser le VR avec des cales de roues
- Porter des gants et des lunettes de protection


Outils requis

- Perceuse et foret de 1/8 po
- Ruban-cache (deux bandes de 7 po)
- Crayon ou marqueur effaçable
- Tournevis Phillips no 2

* La couleur alternative est le plastique blanc

ÉTAPE 1 — Assembler les pièces

- A. Insérer chaque barre de raccordement en aluminium dans chaque support d'extrémité, puis aligner les trous prépercés (Fig. 2-A). Fixer ensuite les deux pièces ensemble avec deux vis (Fig. 2-B).

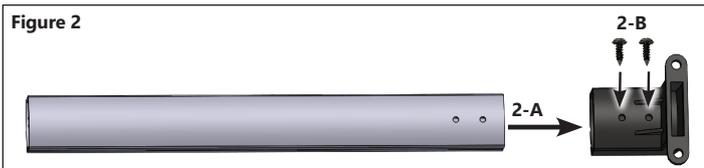

- B. En utilisant les deux barres de raccordement assemblées, faire glisser chacune des barres dans chaque support d'extrémité de la barre centrale noire (Fig. 3).



- C. Préparer les deux bandes de ruban-cache de 7 pouces.

ÉTAPE 2 — Positionner, installer le ruban et percer les trous dans l'assemblage

- A. Placer l'assemblage contre la porte-moustiquaire et ajuster les trois pièces jusqu'à ce que la barre soit positionnée au bon endroit, comme suit :

- S'assurer que la barre de raccordement en plastique noir est **centrée horizontalement** entre les assemblages de barre en aluminium droit et gauche.
- S'assurer que les supports d'extrémité droit et gauche sont à une **même distance verticale** au-dessus de la traverse de la porte-moustiquaire (ou d'un autre point de référence, comme le cadre de la poignée de porte).

- B. À l'aide d'un crayon ou d'un marqueur effaçable, faire une marque au travers du trou supérieur prépercé de chaque support d'extrémité gauche et droit de la porte-moustiquaire.

- C. Pour fixer temporairement l'assemblage ensemble, enrouler un morceau de ruban-cache autour de chaque support d'extrémité de la barre centrale en plastique noir, à la jonction des barres de raccordement en aluminium gauche et droite (Fig. 4). Veiller à ce que le ruban ne recouvre pas les trous prépercés.



- D. Avec les trous prépercés face à soi, utiliser une perceuse avec un foret de 1/8 po pour percer les trous dans les barres de raccordement en aluminium. Utiliser les quatre trous prépercés dans la barre centrale en plastique noir comme guide. **Mise en garde** : s'assurer de ne pas percer de l'autre côté de la barre en aluminium (le côté orienté vers l'extérieur une fois installée).

ÉTAPE 3 — Installer l'assemblage sur la porte-moustiquaire

- A. Fixer la barre centrale en plastique noir aux barres de raccordement en aluminium avec les quatre vis fournies (Fig. 5). Retirer les bandes de ruban.



- B. Sur la porte-moustiquaire, aux deux endroits marqués, percer un petit trou avec le foret de 1/8 po. **Mise en garde** : veiller à ne pas percer trop profondément ni à percer de l'autre côté de la porte.

- C. Retourner la barre-poussoir et la placer contre la porte-moustiquaire, en alignant les trous supérieurs de chaque support d'extrémité avec les trous percés dans la porte. Installer une vis dans les trous supérieurs des supports d'extrémité pour partiellement fixer la barre-poussoir sur la porte-moustiquaire.

- D. Une fois les trous supérieurs fixés, percer les deux derniers petits trous dans la porte-moustiquaire en utilisant le trou inférieur de chaque support d'extrémité comme guide. **Mise en garde** : veiller à ne pas percer trop profondément ni à percer de l'autre côté de la porte.

- E. Installer une vis dans les trous inférieurs des supports d'extrémité pour fixer complètement la barre-poussoir sur la porte-moustiquaire.

L'installation est terminée.