

### 2015+ Ford F-150 Door Handle Pull Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974  
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)  
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty
Regular Cab Kit	2
Super Cab & Super Crew Kit	4

#### Tools Required:

- Rubbing Alcohol
- Clean Towel

### Door Handle Pull Installation

1. Note, if you are also installing Door Handle Buckets, install the buckets first. Refer to the Door Handle Bucket instruction sheet.
2. Clean and dry the vehicle thoroughly.
3. The vehicle surface temperature must be a minimum of 15°C (60°F).
4. Apply rubbing alcohol to the clean towel and wipe down the entire boxed area shown in Figure 1 on the door. This will ensure proper adhesion to the vehicle. (Passenger handle shown)

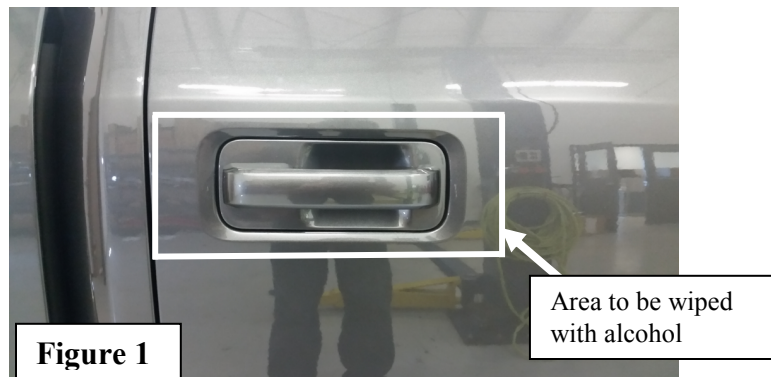

5. As shown in Figure 2, remove the 3M tape from back of door handle pull.



Figure 2

6. Align the door handle cover over the door handle pull. **IMPORTANT: Do not to allow the adhesive surface of the panels to touch the vehicle prior to being in the correct location.** When aligned, press and hold in position for 30 seconds to ensure proper adhesion. See Figure 3 for proper alignment.



Figure 3

7. Repeat steps 3 - 5 for each door.